



Reikan FoCal Fully Automatic Test Report

for Canon EOS 6D (serial number 23023003454) with EF35mm f/1.4L USM Test run on: 08/03/2017 13:52:23 with FoCal 2.4.5.3284M

Report created on: 08/03/2017 13:57:35 with FoCal 2.4.5M

Overview

Test Information

Property	Description
Data Creation FoCal Version	2.4.5.3284M
Data Analysis FoCal Version	2.4.5M
OS Version	OS X 10.11.6
Source Mode	Camera Mode
Image Capture Mode	JPEG
Analysis Method	Multi-ESH (RGB)
Camera Model	Canon EOS 6D
Firmware Version	1.1.7
Serial Number	23023003454
Camera Temperature	19C
Test Colour Temp	5200K
Lens	EF35mm f/1.4L USM
Focal Length	35mm
Termination Reason	Success
Test Aperture	f/1.4
Test ISO	100
Defocus Method	Large defocus away from the camera
Distance to Target	2m
Starting AF Microadjustment	+2
Tested AF Microadjustment Range	Full (-20 to 20)
AF Microadjustment Step Size	Auto
AF Consistency Constraint	6%
Total Shot Count	16
Calculated AF Microadjustment	-1
Result Confidence	Excellent
Consistency of Focus	98.1%




Test Details

Lens Profile Chart

The Lens Profile chart shows how the image quality changes as the AF Microadjustment changes. The orange line represents how the sharpness is expected to change through all values, so the highest point on this line corresponds to the best predicted AF Microadjustment value.

Each point on the chart represents the result of a single shot:

- Red marker: unoptimised sharpness
- Green marker: optimised sharpness
- Orange circle within marker this is the representative sharpness for this AFMA
- Orange curve the predicted sharpness across the AFMA range
- Green triangle highest value
- Red triangle lowest value

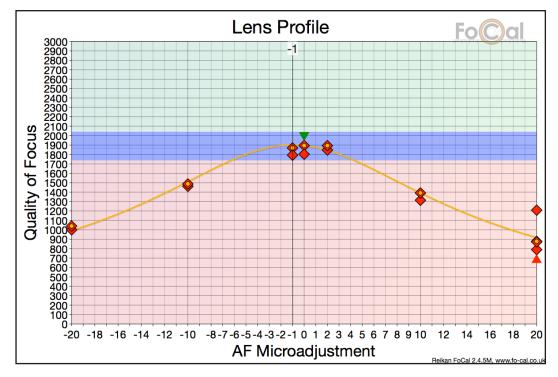

Before/After Comparison

The images show the before and after shots.

	AF	
	Microadjustment	
Before	+2	
After	-1	






RGB Analysis Chart

The RGB Analysis chart shows the predicted sharpness across the AF Microadjustment range for red, green and blue light. The vertical lines indicate the predicted best AF Microadjustment for each of the 3 colours.

It is important to note that when run in JPEG mode, there is some contamination between the colours so the result is not truly representative.

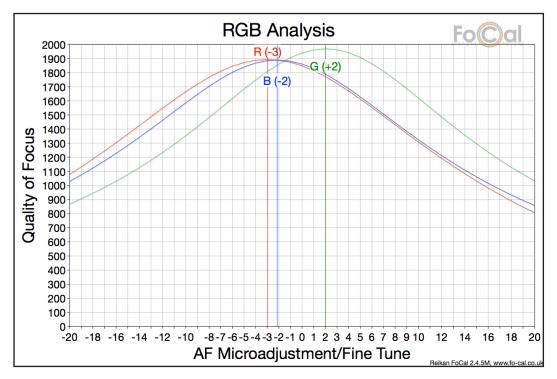

RGB Analysis Details


Property	Description
Red:	
Red Result	-3
Red Confidence	Good
Green:	
Green Result	+2
Green Confidence	Excellent
Blue:	
Blue Result	-2
Blue Confidence	Good




The following table shows information obtained for this test point:

	Shot 1	Shot 2
Aperture	f/1.4	f/1.4
Shutter Speed	1/80s	1/80s
EV	7.2	7.2
Colour Temperature	5200K	5200K
Camera Temperature	17C	17C
Quality Measure	1000.4	1040.4
Optimised	No	No
Ignored	No	No
Spectral Power (R/G/B)	34/35/31	34/35/31
Red Quality	1105.0	1152.0
Green Quality	835.1	870.6
Blue Quality	1080.9	1118.1
HVR	-5.7%	-6.0%

The following image is a crop of the section of image analysed by FoCal:

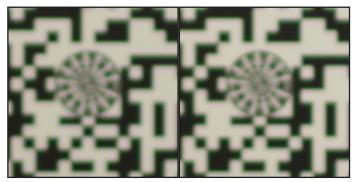

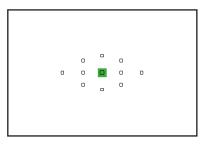







The following table shows information obtained for this test point:

	Shot 1	Shot 2
Aperture	f/1.4	f/1.4
Shutter Speed	1/80s	1/80s
EV	7.2	7.2
Colour Temperature	5200K	5200K
Camera Temperature	18C	18C
Quality Measure	1461.9	1487.3
Optimised	No	No
Ignored	No	No
Spectral Power (R/G/B)	34/35/31	35/35/31
Red Quality	1587.5	1601.1
Green Quality	1297.1	1329.5
Blue Quality	1509.8	1526.3
HVR	-4.1%	-4.1%

The following image is a crop of the section of image analysed by FoCal:

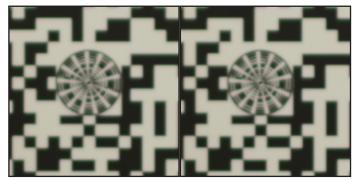

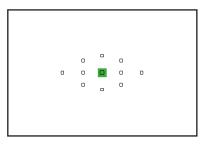







The following table shows information obtained for this test point:

	Shot 1	Shot 2
Aperture	f/1.4	f/1.4
Shutter Speed	1/80s	1/80s
EV	7.2	7.2
Colour Temperature	5200K	5200K
Camera Temperature	19C	19C
Quality Measure	1793.4	1869.9
Optimised	No	No
Ignored	No	No
Spectral Power (R/G/B)	35/34/31	35/34/31
Red Quality	1808.9	1820.1
Green Quality	1774.1	1955.3
Blue Quality	1795.1	1832.1
HVR	0.8%	2.0%

The following image is a crop of the section of image analysed by FoCal:

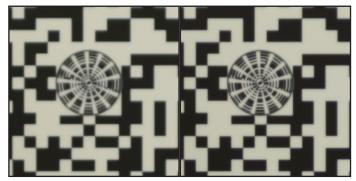

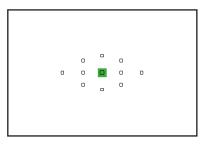







The following table shows information obtained for this test point:

	Shot 1	Shot 2
Aperture	f/1.4	f/1.4
Shutter Speed	1/80s	1/80s
EV	7.2	7.2
Colour Temperature	5200K	5200K
Camera Temperature	16C	17C
Quality Measure	1803.5	1895.0
Optimised	No	No
Ignored	No	No
Spectral Power (R/G/B)	35/34/31	35/34/31
Red Quality	1814.6	1856.6
Green Quality	1780.2	1961.4
Blue Quality	1809.5	1862.5
HVR	0.2%	1.0%

The following image is a crop of the section of image analysed by FoCal:

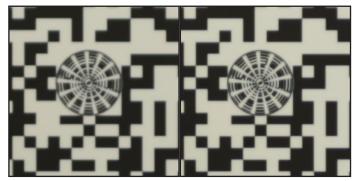

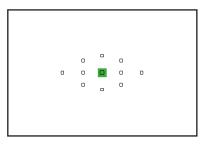







The following table shows information obtained for this test point:

	Shot 1	Shot 2	
Aperture	f/1.4	f/1.4	
Shutter Speed	1/80s	1/80s	
EV	7.2	7.2	
Colour Temperature	5200K	5200K	
Camera Temperature	16C	16C	
Quality Measure	1894.4	1847.8	
Optimised	No	No	
Ignored	No	No	
Spectral Power (R/G/B)	34/34/31	34/34/31	
Red Quality	1887.4	1848.5	
Green Quality	1909.9	1843.7	
Blue Quality	1888.0	1846.2	
HVR	1.0%	-0.3%	

The following image is a crop of the section of image analysed by FoCal:

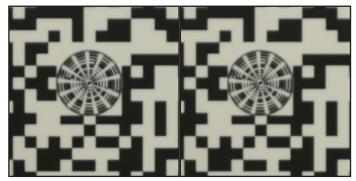

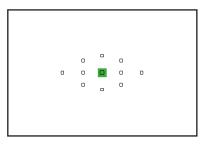







The following table shows information obtained for this test point:

	Shot 1	Shot 2	
Aperture	f/1.4	f/1.4	
Shutter Speed	1/80s	1/80s	
EV	7.2	7.2	
Colour Temperature	5200K	5200K	
Camera Temperature	19C	19C	
Quality Measure	1391.6	1314.4	
Optimised	No	No	
Ignored	No	No	
Spectral Power (R/G/B)	35/34/31	35/34/31	
Red Quality	1254.7	1173.8	
Green Quality	1628.0	1553.9	
Blue Quality	1294.7	1208.3	
HVR	1.7%	1.2%	

The following image is a crop of the section of image analysed by FoCal:

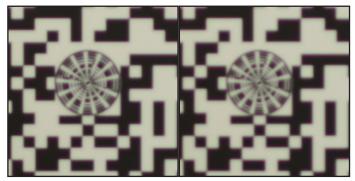

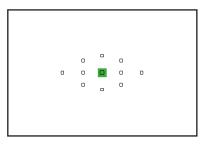







The following table shows information obtained for this test point:

	Shot 1	Shot 2	Shot 3	Shot 4
Aperture	f/1.4	f/1.4	f/1.4	f/1.4
Shutter Speed	1/80s	1/80s	1/80s	1/80s
EV	7.2	7.2	7.2	7.2
Colour Temperature	5200K	5200K	5200K	5200K
Camera Temperature	17C	17C	18C	18C
Quality Measure	789.8	1209.0	878.0	872.4
Optimised	No	No	No	No
Ignored	No	No	No	No
Spectral Power (R/G/B)	35/34/31	35/34/31	35/34/31	35/34/31
Red Quality	714.7	1072.8	782.5	783.4
Green Quality	919.7	1439.6	1040.9	1030.5
Blue Quality	728.5	1115.3	808.9	803.3
HVR	-1.6%	1.3%	-1.4%	-1.3%

The following image is a crop of the section of image analysed by FoCal:

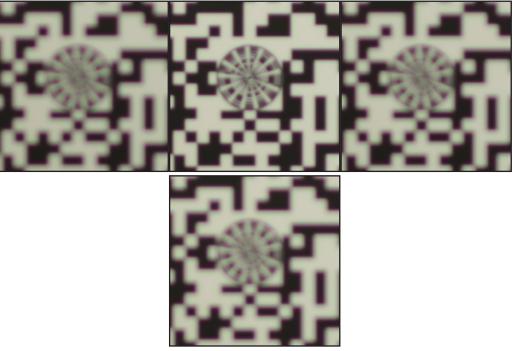

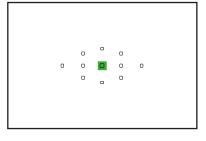








Lens Profile

The Lens Profile chart shows how the image quality changes as the AF Microadjustment changes. The orange line represents how the sharpness is expected to change through all values, so the highest point on this line corresponds to the best predicted AF Microadjustment value.

Each point on the chart represents the result of a single shot:

- Red marker: unoptimised sharpness
- Green marker: optimised sharpness
- Orange circle within marker this is the representative sharpness for this AFMA
- Orange curve the predicted sharpness across the AFMA range
- Green triangle highest value
- Red triangle lowest value

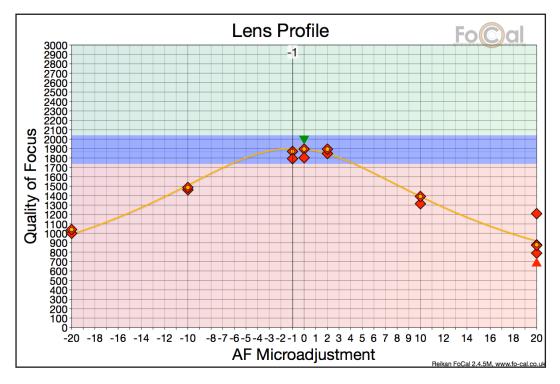




Focus Consistency

The Focus Consistency chart shows the focus variability at each tested point where available. This is calculated from the spread in sharpness values from shots at a single AF Microadjustment value.

A value of 100% indicated perfect repeatability. In normal use, a values above 97% indicate acceptable autofocus repeatability, and above 99% indicate very good repeatability. Note that the consistency of focus measurement is less relevant far from the best AF Microadjustment value.

If FoCal Comparison Data is available for this camera and lens a red/blue/green overlay will be added to indicate how your camera and lens performance compares with other users as follows:

- Red: indicates below-average performance,
- Blue: typical performance experienced by other users
- Green: above average performance.

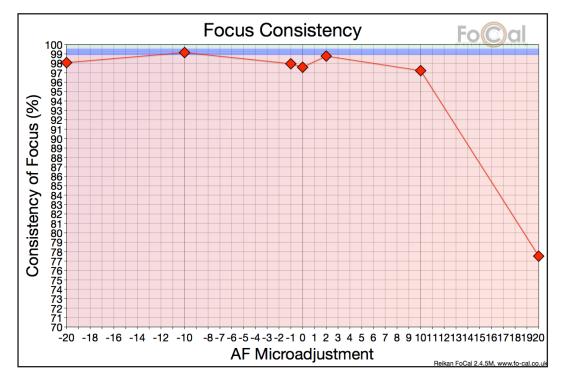




Astigmatism Factor

The Astigmatism Factor chart shows the image quality ratio between the horizontal and vertical analysis directions. If this value varies by more than 10% across the range, or the average value is more than +/- 5% then your lens may be suffering from some decentering or lens element alignment issues.

If FoCal Comparison Data is available for this camera and lens a red/blue/green overlay will be added to indicate how your camera and lens performance compares with other users as follows:

- Red: indicates below-average performance,
- Blue: typical performance experienced by other users
- Green: above average performance.

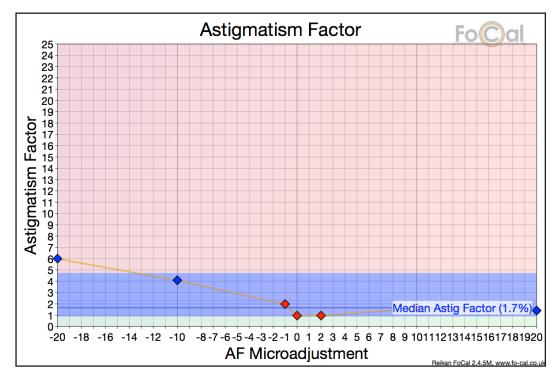





Result Convergence

The Result Convergence chart indicates how FoCal determined the best AF Microadjustment value as more points were added to the data. There is no result for the first few points, then the result should stabilise as more points are added towards the end of the test (the right side of the chart).

The size of the green area gives an indication of the confidence in the result at that point. A large green area spreading across many AF Microadjustment values indicates poor data that will not give an acceptable final result.

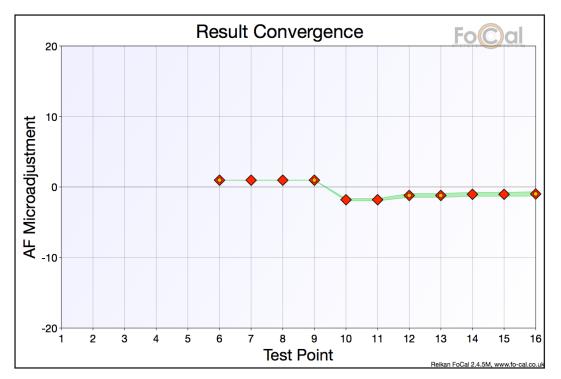





Image Motion

As changes are made inside a lens (e.g. focussing or aperture change), the image projected onto the sensor can move slightly. The Image Motion chart shows the absolute number of pixels moved for each image compared to the first image captured.

Typically, the Image Motion should be significantly less than 10 pixels, and a repeatable higher value could indicate misaligned lens optics, camera movement or vibration during the test or other environmental or lens issues.

If FoCal Comparison Data is available for this camera and lens a red/blue/green overlay will be added to indicate how your camera and lens performance compares with other users as follows:

- Red: indicates below-average performance,
- Blue: typical performance experienced by other users
- Green: above average performance.

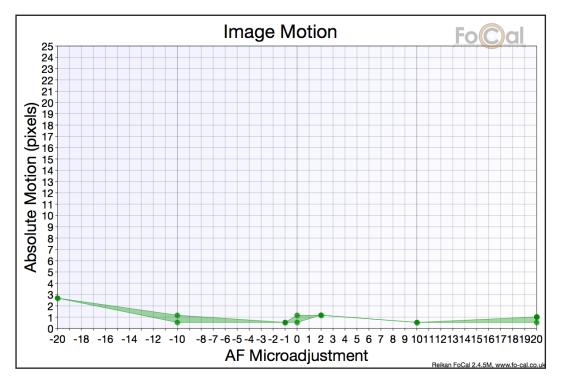



Front/Back Focus

The Front/Back Focus chart gives an indication of the amount of front or back focus would be experienced at any particular AF Microadjustment value.

The green band down the centre is very approximately the range of the depth-of-field, so AF Microadjustment values within this range should give reasonable focus results.

Note: The line is fitted to the average of the data points, and poor quality data can lead to significant deviations of this curve from real focus positions. It's important to interpret this metric in conjunction with the quality of the data - poor focus consistency or poor overall results will mean this metric is of little value.

